

FIRE ALARM INITIATING DEVICES

System Control and Indicator On Board

AHC-0924

INDICATING LED

- ① **DIGITAL VOLTMETER** : Indicating regular power supply (Normal: 20 VDC ~ 30 VDC)
- ② **SWITCH UNLOCK** : Red LED is flashing once 1 sec.
- ③ **AC POWER** : Green LED is Lit: The AC power connected to the control panel.
- ④ **DC POWER** : The AC power failure and the DC power connected to the control panel.
- ⑤ **SYSTEM TROUBLE** : Red LED is Lit. The fuse fault of main board.
- ⑥ **O/C FAULT** : Red LED is Lit. Indicating zone open circuit fault.
- ⑦ **TROUBLE** : Red LED is Lit. Indicating tank water below level or other trouble.
- ⑧ **STATION ALARM** : Red LED is Lit. The manual pull station are activated.
- ⑨ **TELEPHONE** : Red LED is Lit. Indicating the phone call.
- ⑩ **FIRE** : Red LED is flashing. Fire alarm!
- ⑪ **ZONE FIRE** : Red LED is Lit. Indicating the zone has detected the fire.
- ⑫ **ZONE O/C FAULT** : Yellow LED is Lit. Indicating the zone open circuit fault.
- ⑬ **ALARM BUZZER** : 85dB @ 1m (min.)
- ⑭ **TROUBLE BUZZER** : Zone open circuit: once 1 sec. Telephone & trouble alarm: always.

SWITCH OPERATION: UP - SETTING, DOWN - CLOSE

- ⑮ **BATTERY TEST** : Pressing the button will test the battery.
- ⑯ **FIRE TEST** : Down the switch to test zone fire circuit (Test mode)
- ⑰ **O/C TEST** : Up the switch to test zone open circuit (Test mode)
- ⑱ **FAULT SILENCE** : Unlock the switch to silence TROUBLE BUZZER.
- ⑲ **MAIN SILENCE** : Unlock the switch to silence FIRE ALARM BUZZER.
- ⑳ **AUX SILENCE** : Unlock the switch will cause all sector sounder outputs to switch off.
- ㉑ **FIRE STORAGE** : Unlock the switch disable to double check the fire alarm signal.
- ㉒ **AUX RELAY** : Unlock the switch to control the relay NC or NO output.
- ㉓ **AUTO RESET** : Unlock the switch, auto reset to standby mode.
- ㉔ **SYSTEM RESET** : Pressing the button will reset to standby mode.
- ㉕ **ZONE TEST** : Pressing the button will test zones fire/open circuit (in test mode)