


System Control And Indicators On Board

AH-03312-8L

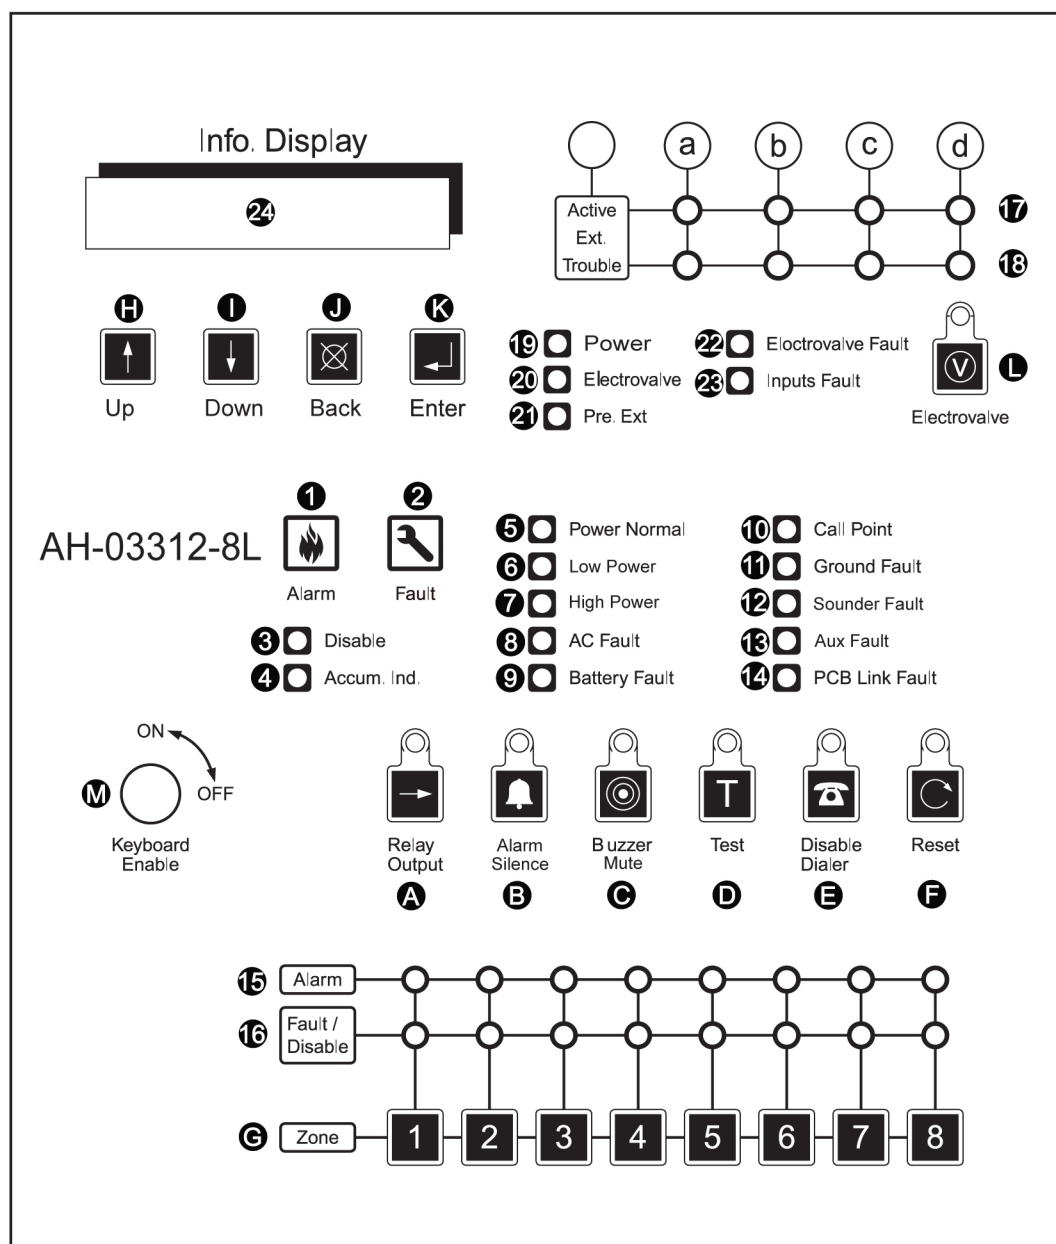

Descriptions

- | | | |
|---------------------------------|----------------------------------|--------------------------------|
| 1. Fire Alarm Indicator | 13. Aux Fault Indicator | A. Relay Output Switch |
| 2. Fault Indicator | 14. PCB Link Fault Indicator | B. Alarm Silence Switch |
| 3. Zone Disable Indicator | 15. Zone Alarm Indicator | C. Buzzer Mute Switch |
| 4. Accumulation Indicator | 16. Zone Fault/Disable Indicator | D. Test Switch |
| 5. Power Normal Indicator | 17. Ext. Zone Active Indicator | E. Disable Dialer Switch |
| 6. Low Power Indicator | 18. Ext. Zone Trouble Indicator | F. Reset Switch |
| 7. High Power Indicator | 19. Power Indicator | G. Zone Disable Switch |
| 8. AC Fault Indicator | 20. Electrovalve Indicator | H. Up Switch |
| 9. Battery Fault Indicator | 21. Pre. Ext. Indicator | I. Down Switch |
| 10. Manual Call Point Indicator | 22. Electrovalve Fault Indicator | J. Back Switch |
| 11. Ground Fault Indicator | 23. Inputs Fault Indicator | K. Enter Switch |
| 12. Sounder Fault Indicator | 24. Information Display | L. Electrovalve Disable Switch |
| | | M. Keyboard Enable Switch |