

Operation for FA-500 SERIES

◆ NORMAL CONDITION


The normal condition refers to a control panel with no active events.

- The green **AC POWER** LED is lit (steady indication)
- The green **NORMAL** LED is lit (steady indication)
- No other LED indications are given.

◆ FIRE CONDITION

- The control panel is in fire condition, i.e it is signalling a fire alarm.
- The **FIRE** indicator (red LED) is flashing.
- The Zone which has detected the fire is indicated by ZONE FIRE lights.
- The internal control panel **FIRE ALARM BUZZER** sounds.
- External alarm devices are activated. (Bell : 24VDC, Aux relay any contacts : NO)

◆ FIRE STORAGE (FOR DOUBLE CHECK)

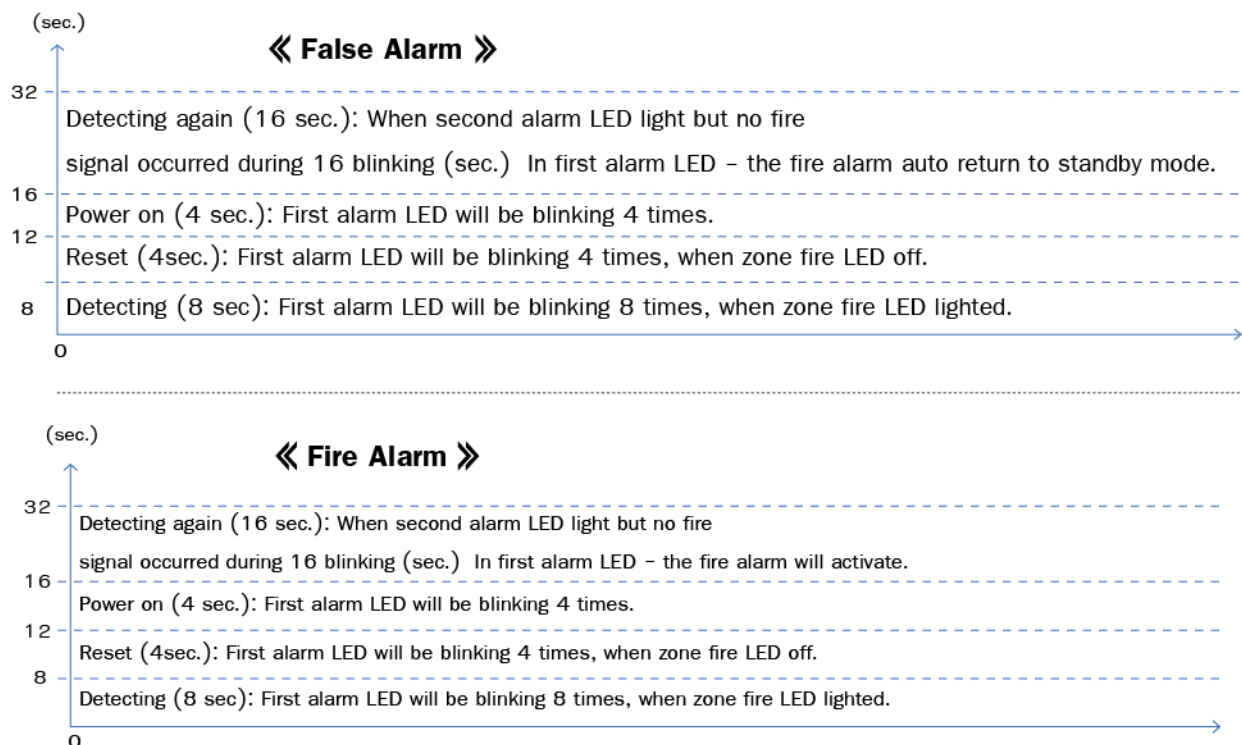

Wiring Diagram for FA-500 SERIES CONTROL PANEL

