


Master Station Control Panel



JNS - 48 / 60 / 72

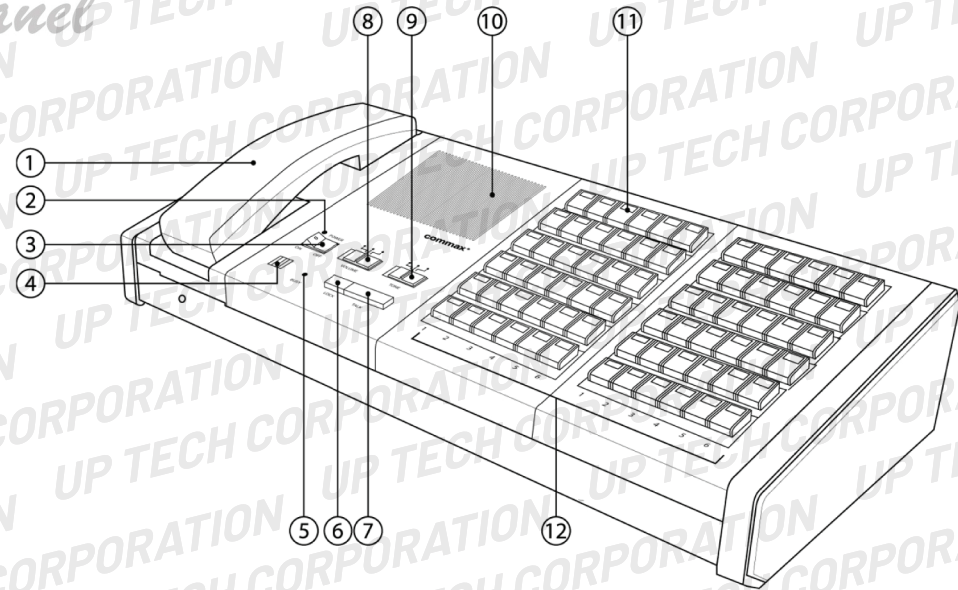

Structure

JNS-48, JNS-60, JNS-72

- | | |
|-----------------------|---|
| (1) Hand set | : 1 TEL. |
| (2) Power LED | : To check the power switch's condition. |
| (3) Power S/W | : To provide a power. |
| (4) C-MIC | : To transmit a message. |
| (5) Busy LED | : To indicate busy line by lamp on. |
| (6) Lock Button | : Only to transmit a message in one way, the lamp is on. |
| (7) Talk Button | : To press the button for talking (during H/F communication) |
| (8) Voice | : To adjust receiving volume by three stage, High, Mid & Low. |
| (9) Tone | : To adjust receiving signal by three stage, High, Mid & Low. |
| (10) Speaker | : To output the message. |
| (11) LED | : It will be on the case of substation call or pressing a selection button. |
| (12) Selection Button | : To select a station to call. |



JNS - 12 / 24 / 36

NURSE CALL SYSTEM

COMMAX

COMMAX / 2022

Master Station Control Panel

Model : JNS-12 / 24 / 36 / 48 / 60 / 72

Distributed by : U.P.TECH CORPORATION CO.,LTD

28 Soi Rattanathibet 28 Yaek 2 Bangkrasor Muangnonthaburi Nonthaburi 11000 **THAILAND**

Tel : 02-965-7701-6, 086-355-6781 **Line** : 0863133492 **Fax** : 02-965-7707 **Email** : sales@up-t.com

Email : admin@up-t.com **Website** : www.alarmthailand.com , www.firealarmonline.com