


Instructions

- **NORMAL CONDITION** - The green **MAINS ON** light is lit - The Key switch is at **NORMAL**
- **ALARM CONDITION** - the alarm sounders operate and the red **FIRE** lights flash - **EVACUATE THE BUILDING**
- **TO SILENCE ALARM SOUNDERS** - Turn the key switch to **ARM CONTROLS**, then press the **SILENCE ALARM SOUNDERS** button, the lights will go steady, and the **FAULT SOUNDER** will Sound, Do not Press the **RESET/ RESOUND/ TEST ZONE LAMPS** button until you have identified the detector causing the alarm signal. When you have indentified the cause of the alarm signal, press the **RESET/ RESOUND/ TEST ZONE LAMPS** button to re-arm the system. Pressing the button will **RESOUND** the sounders, when the alarm still exists.
- **FAULT CONDITION** - The **FAULT SOUNDER** sounds and a yellow **FAULT** light comes on. Identify the fault light - Check that the **MAINS ON** light is on and call the engineer.
- **TO SILENCE** - The **FAULT SOUNDER** Turn the key switch to **ARM CONTROLS** and press the **SILENCE FAULT SOUNDER** button. Press the **SILENCE FAULT SOUNDERS** to evacuate.
- Turning the key switch to **ARM CONTROLS** and Pressing **EVACUATE** will always operate the alarm **SOUNDERS**.
- **TO TEST** - the fault sounder and the zone lamps, turn the key switch to **ARM CONTROLS** and press the **RESET/ RESOUND/ TEST ZONE LAMPS** button.
- For further information. please check the instruction manual.

System Control and Indicator On Board

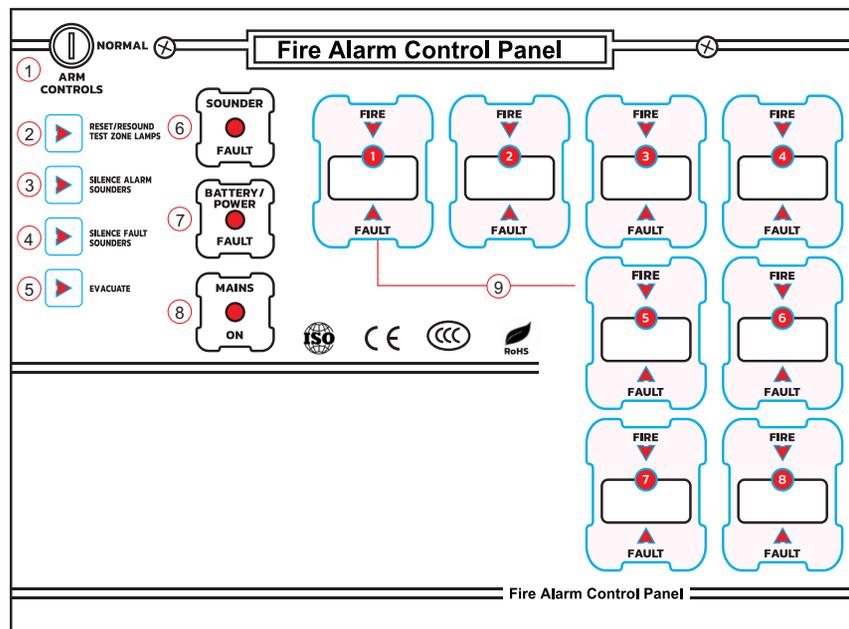

YA-CP102 2, 4, 6, 8 Zone Detector

- 1 Key Switch Control
- 2 Reset Resound Test Zone Lamps Switch
- 3 Silence Alarm Sounders Switch
- 4 Silence Fault Sounders Switch
- 5 Evacuate Switch
- 6 Sounder Fault Indicator (Yellow Color)
- 7 Battery Power Fault Indicator (Yellow Color)
- 8 Mains On Indicator (Green Color)
- 9 8 Zone Indicator
Zone Alarm (Red Color)
Zone Fault (Yellow Color)

Fire Alarm Control Panel



YA-CP102 2, 4, 6, 8 Zone Detector

- 1 zone alarm bell,
- 1 zone alarm bell storage timer alarm (optional).
- 8 zone drive for LED annunciator (optional)

Usafe 2024-2